


# DOOR CONTROL RECEIVER


## COMPONENTS

w/ Rear No. 2 Seat

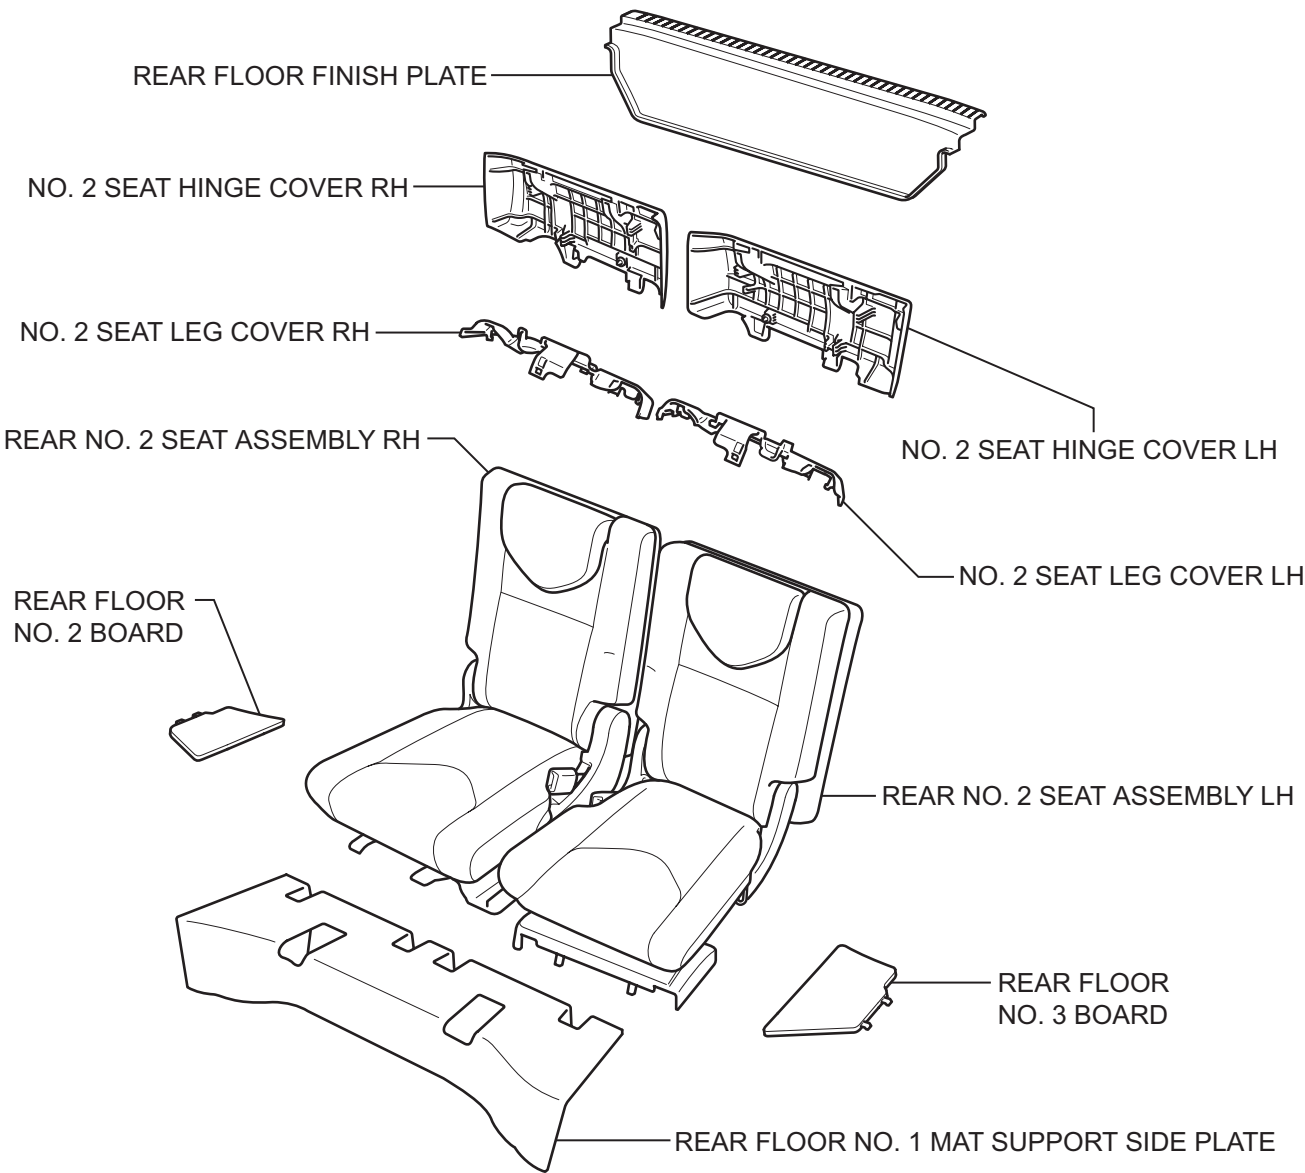


DL

w/o Rear No. 2 Seat

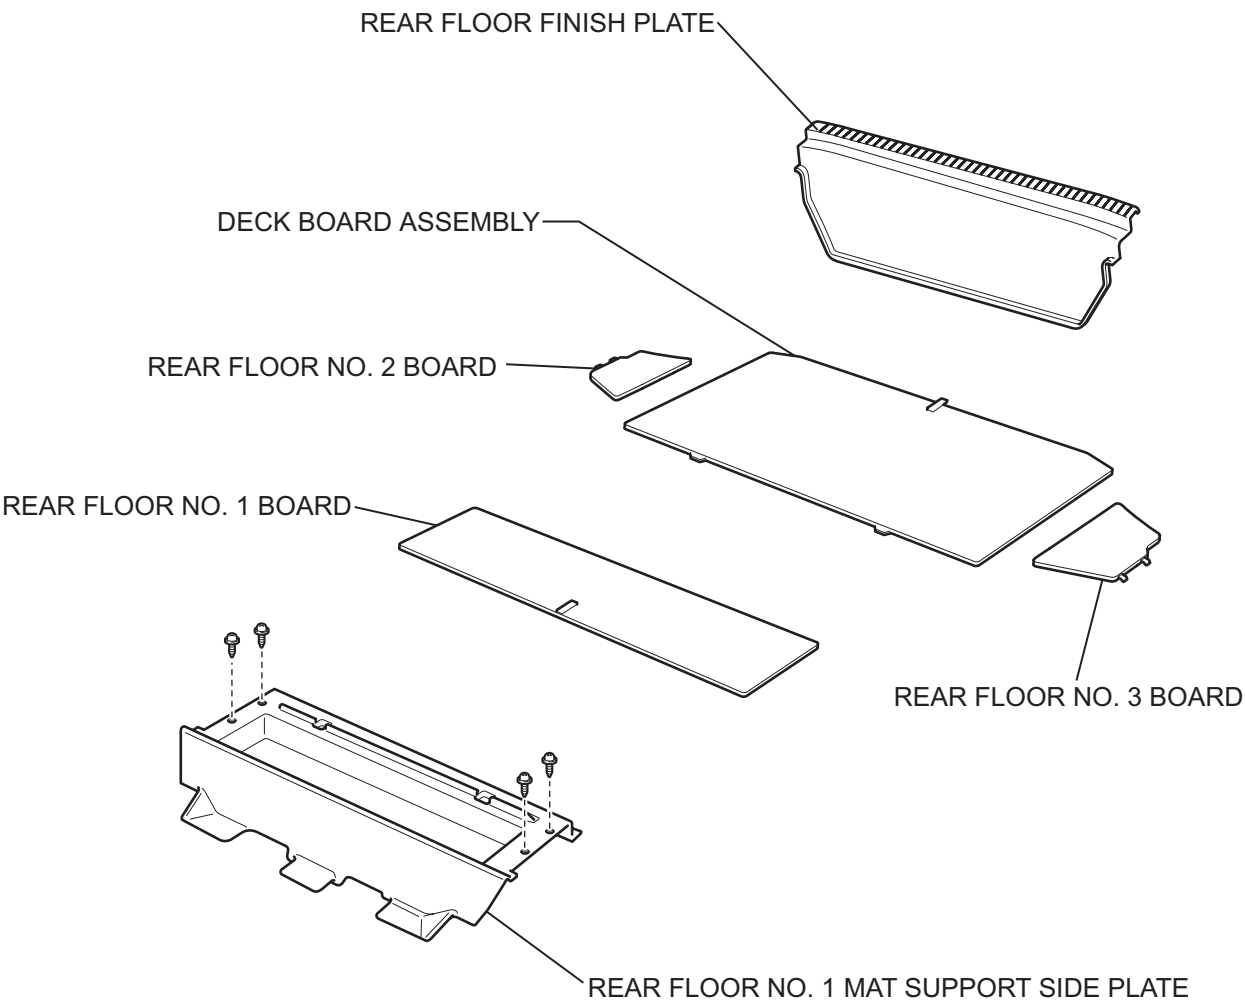


w/ Rear No. 2 Seat

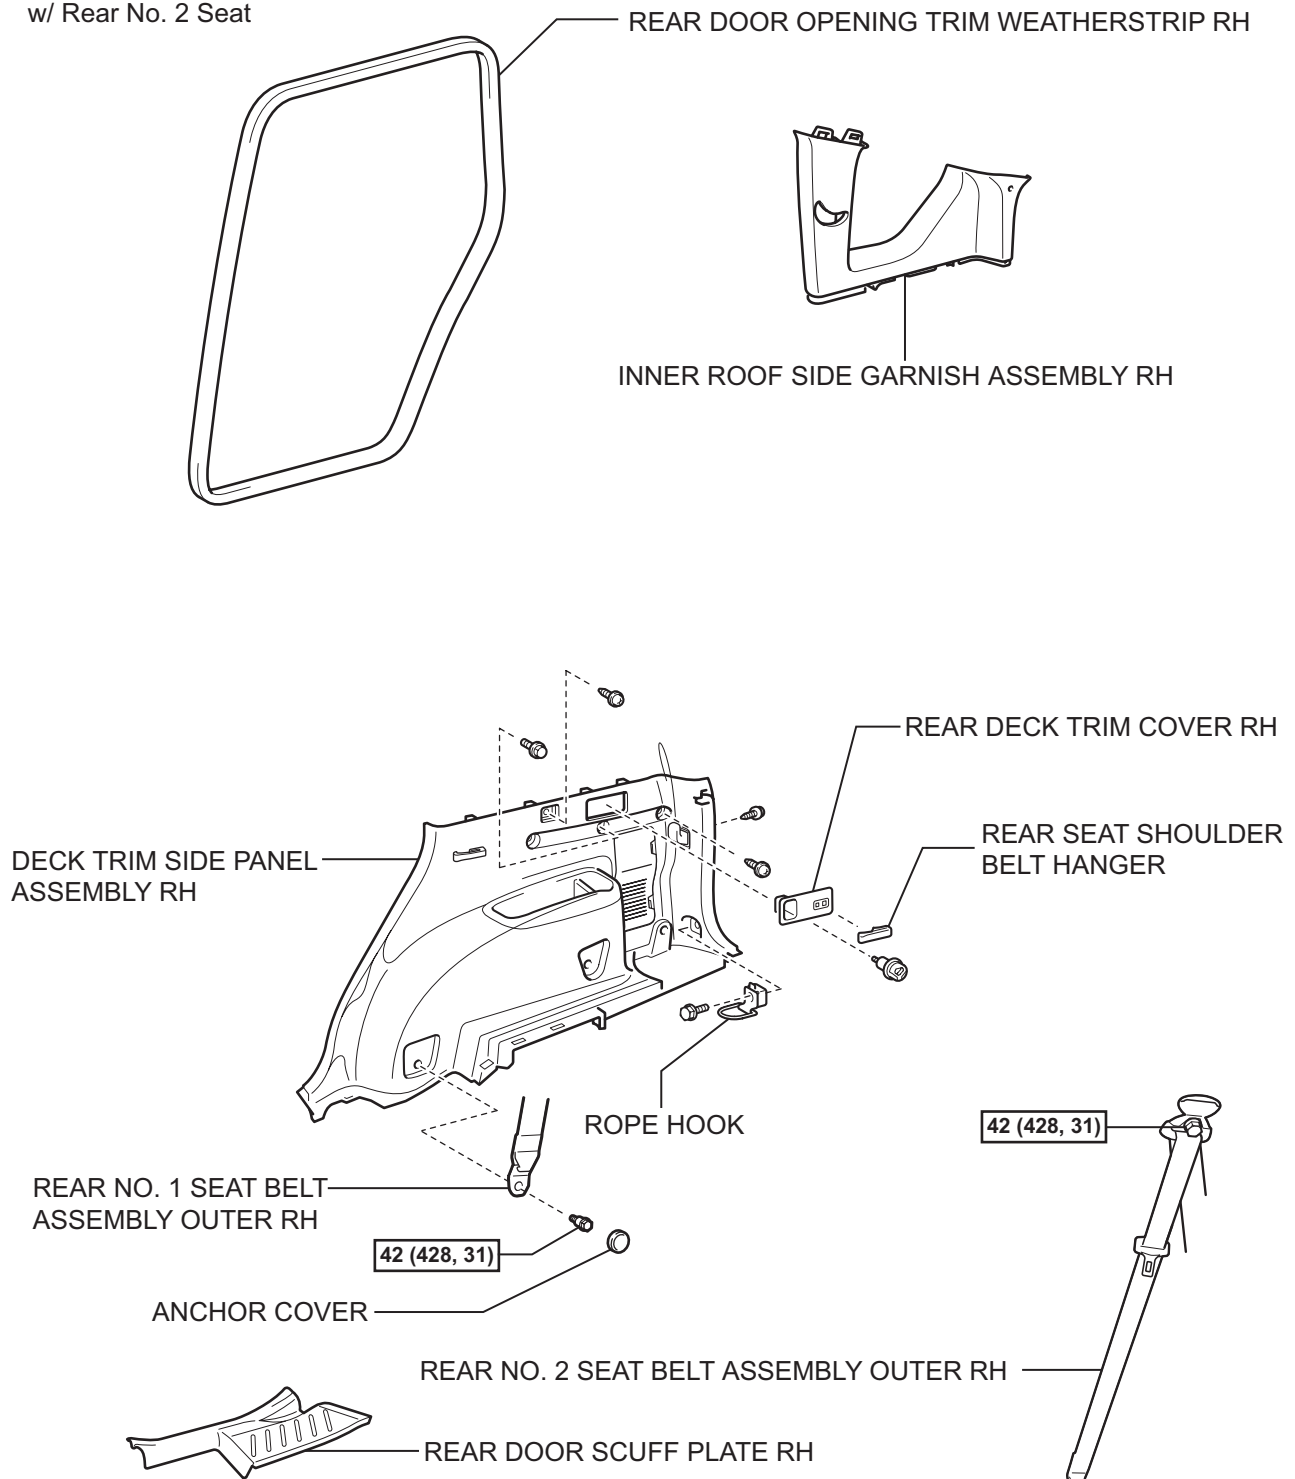



N\*m (kgf\*cm, ft.\*lbf) : Specified torque

DL

w/o Rear No. 2 Seat

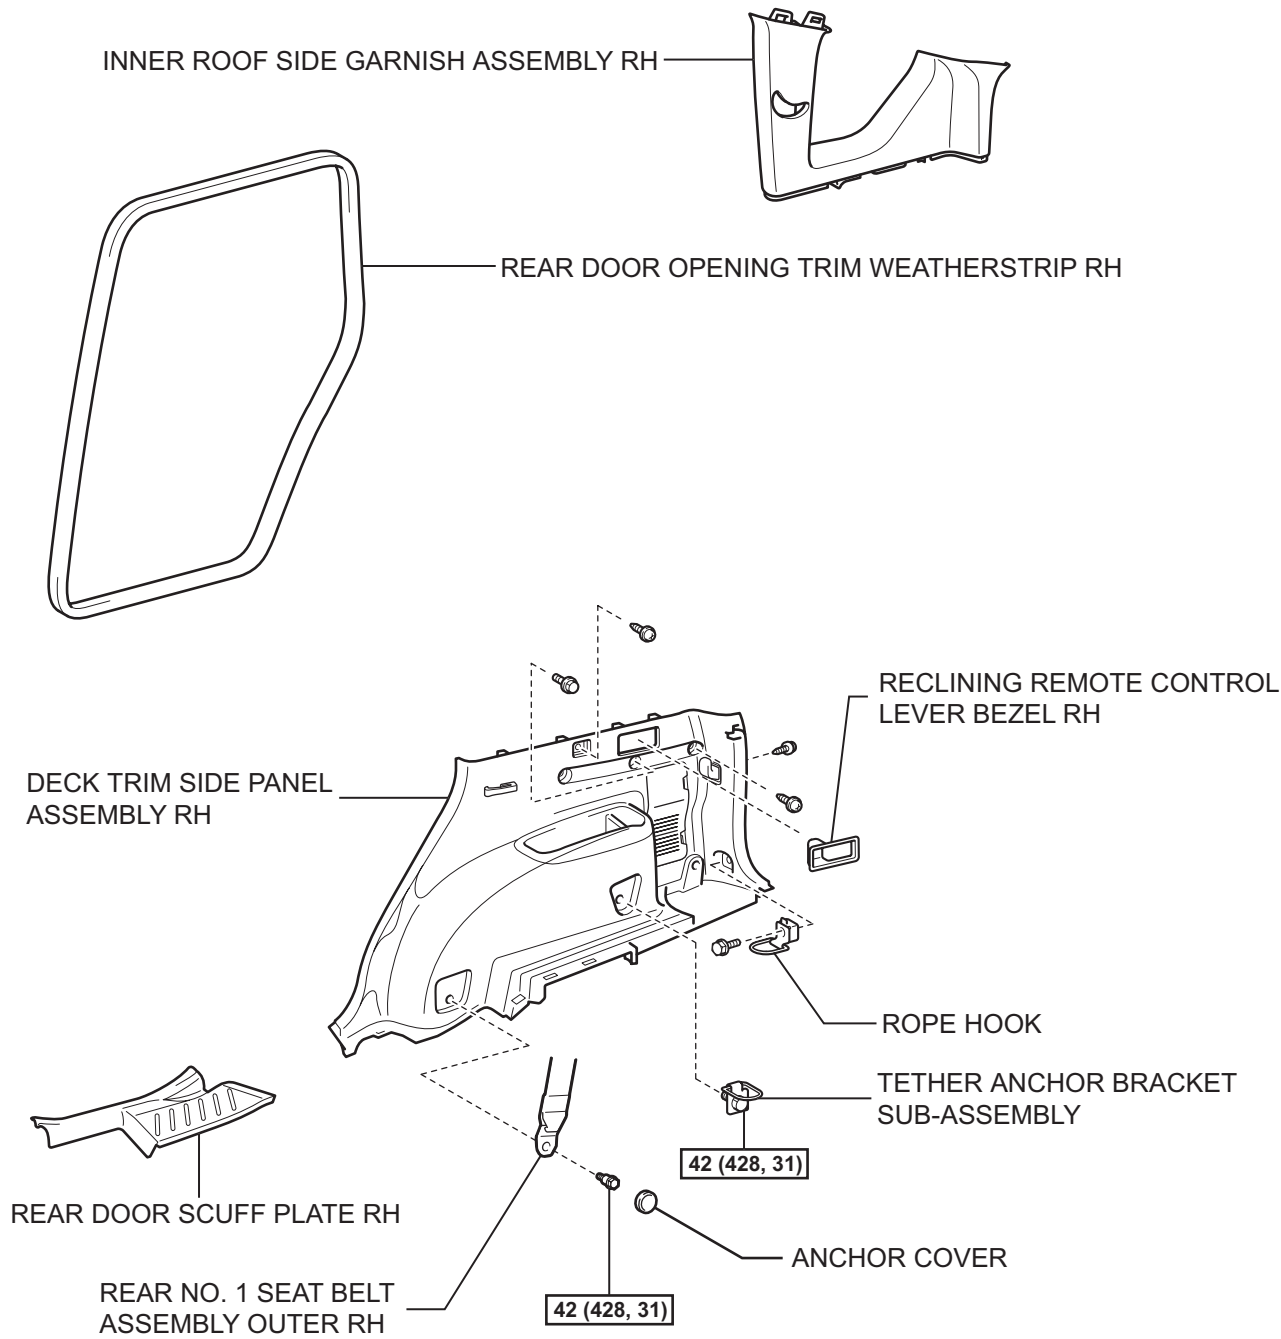



N\*m (kgf\*cm, ft.\*lbf) : Specified torque

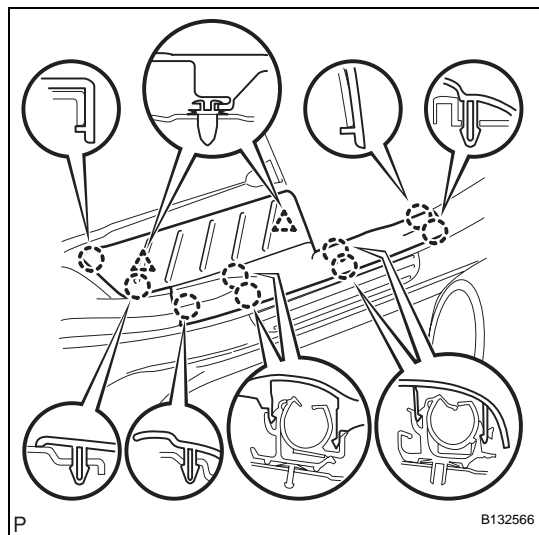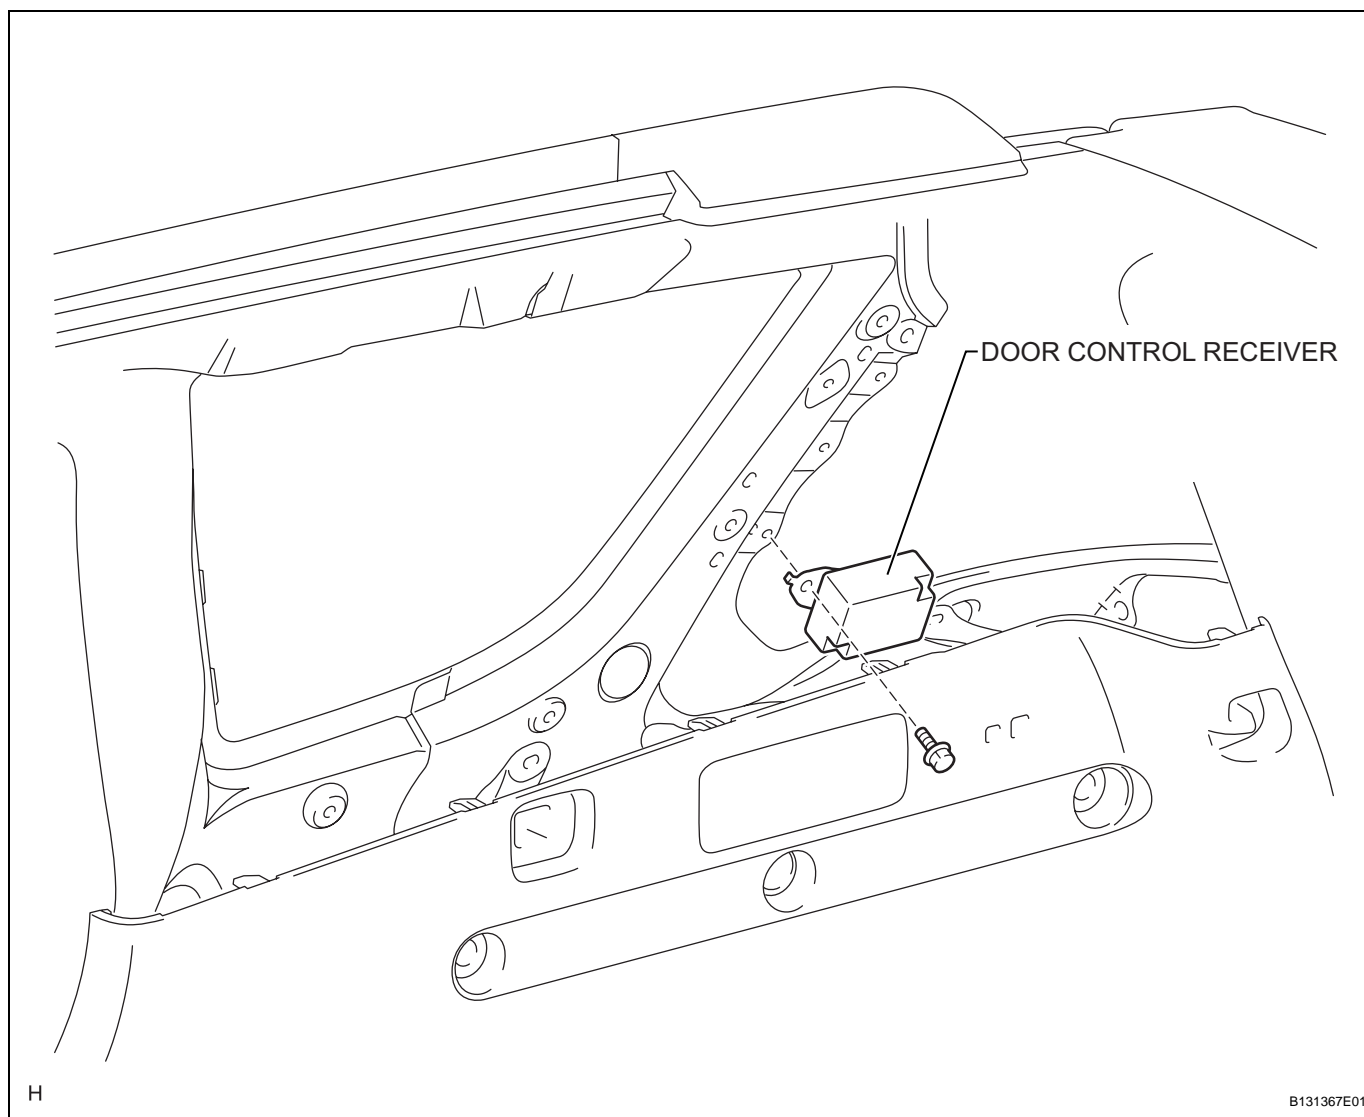


## REMOVAL

1. **REMOVE REAR DOOR SCUFF PLATE RH**
  - (a) Using a screwdriver, detach the 9 claws.  
HINT:  
Tape the screwdriver tip before use.
  - (b) Using a clip remover, detach the 2 clips and remove the garnish.
2. **REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH**
3. **REMOVE REAR FLOOR NO. 1 BOARD (w/o Rear No. 2 Seat)**
4. **REMOVE DECK BOARD ASSEMBLY (w/o Rear No. 2 Seat)**
5. **REMOVE NO. 2 SEAT HINGE COVER LH (w/ Rear No. 2 Seat) (See page [SE-109](#))**
6. **REMOVE NO. 2 SEAT HINGE COVER RH (w/ Rear No. 2 Seat)**  
HINT:  
Use the same procedures described for the LH side.

7. REMOVE NO. 2 SEAT LEG COVER LH (w/ Rear No. 2 Seat) (See page [SE-109](#))
8. REMOVE NO. 2 SEAT LEG COVER RH (w/ Rear No. 2 Seat)  
HINT:  
Use the same procedures described for the LH side.
9. REMOVE REAR NO. 2 SEAT ASSEMBLY LH (w/ Rear No. 2 Seat) (See page [SE-110](#))
10. REMOVE REAR NO. 2 SEAT ASSEMBLY RH (w/ Rear No. 2 Seat)
11. REMOVE REAR FLOOR NO. 3 BOARD
12. REMOVE REAR FLOOR NO. 2 BOARD
13. REMOVE REAR FLOOR NO. 1 MAT SUPPORT SIDE PLATE (See page [IR-31](#))
14. REMOVE REAR FLOOR FINISH PLATE (See page [IR-31](#))
15. REMOVE REAR DECK TRIM COVER RH (w/ Rear No. 2 Seat)
  - (a) Remove the bolt.
  - (b) Using a screwdriver, detach the 4 claws and remove the trim cover.HINT:  
Tape the screwdriver tip before use.
16. REMOVE RECLINING REMOTE CONTROL LEVER BEZEL RH (w/o Rear No. 2 Seat) (See page [SE-80](#))
17. REMOVE TETHER ANCHOR BRACKET SUB-ASSEMBLY (w/o Rear No. 2 Seat)
  - (a) Remove the bolt and tether anchor bracket.
18. REMOVE DECK TRIM SIDE PANEL ASSEMBLY RH (w/o Rear No. 2 Seat) (See page [IR-33](#))
19. REMOVE DECK TRIM SIDE PANEL ASSEMBLY RH (w/ Rear No. 2 Seat) (See page [IR-34](#))

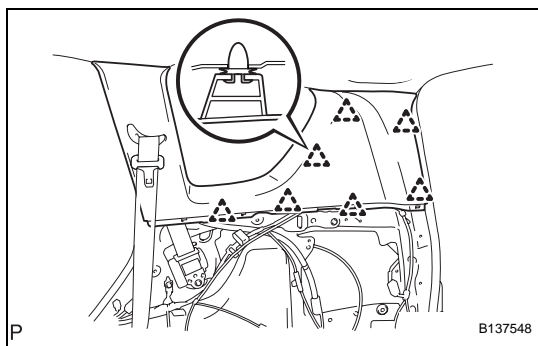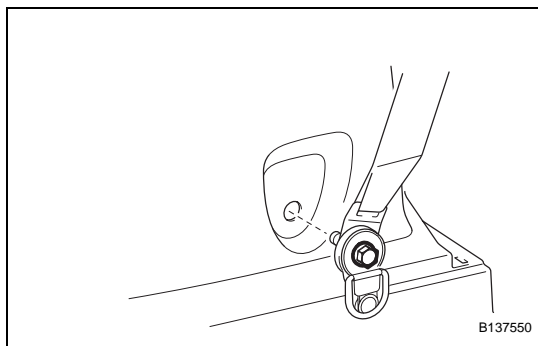

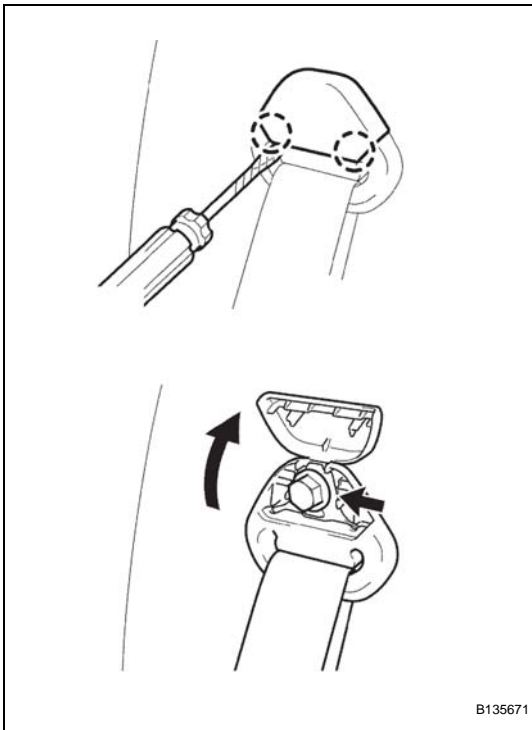

B135671

## 21. REMOVE INNER ROOF SIDE GARNISH ASSEMBLY RH (w/ Rear No. 2 Seat)


- (a) Disconnect the rear No. 2 seat outer belt's shoulder anchor.

- (1) Using a screwdriver, detach the 2 claws and open the seat belt anchor cover.

HINT:


Tape the screwdriver tip before use.

- (2) Remove the bolt and disconnect the shoulder anchor.

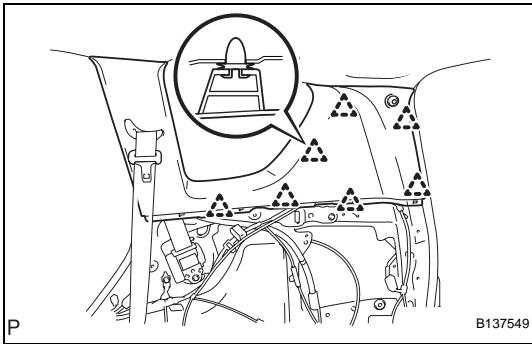

B137549

- (b) Using a clip remover, detach the 7 clips and remove the garnish.

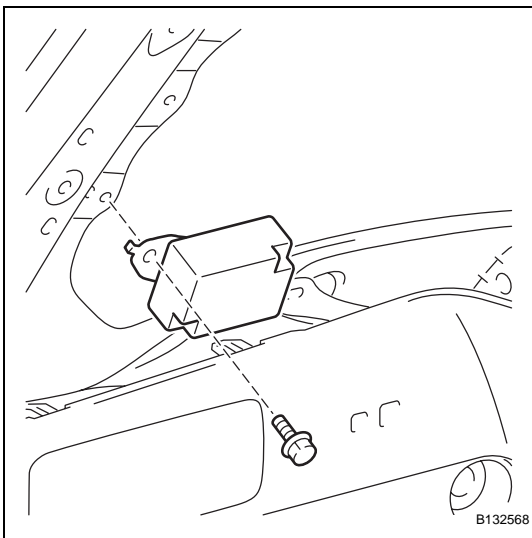

B132568

## 22. REMOVE DOOR CONTROL RECEIVER


- (a) Disconnect the receiver connector.

- (b) Remove the bolt and receiver.

## INSTALLATION


### 1. INSTALL DOOR CONTROL RECEIVER

- Install the receiver with the bolt.
- Connect the receiver connector.

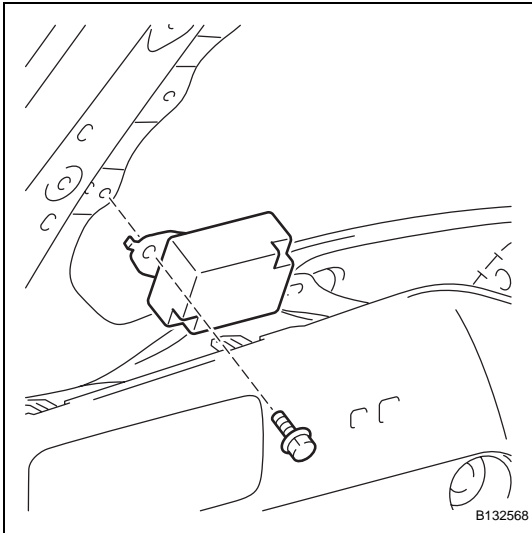


### 2. INSTALL INNER ROOF SIDE GARNISH ASSEMBLY RH (w/o Rear No. 2 Seat)

- Attach the 7 clips to install the garnish.

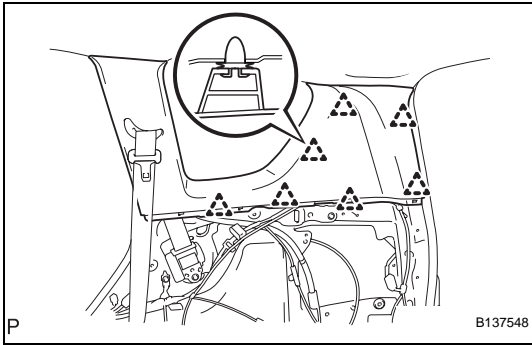

### 3. INSTALL INNER ROOF SIDE GARNISH ASSEMBLY RH (w/ Rear No. 2 Seat)


- Attach the 7 slips to install the garnish.
- Connect the rear No. 2 seat belt's shoulder anchor.
  - Connect the shoulder anchor with the bolt.  
**Torque: 42 N\*m (428 kgf\*cm, 31 ft.\*lbf)**

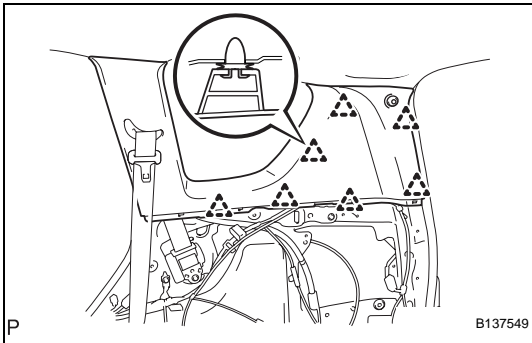


- Attach the claws to close the seat belt anchor cover.

### 4. INSTALL DECK TRIM SIDE PANEL ASSEMBLY RH (w/o Rear No. Seat) (See page [IR-53](#))

### 5. INSTALL DECK TRIM SIDE PANEL ASSEMBLY RH (w/ Rear No. 2 Seat) (See page [IR-54](#))

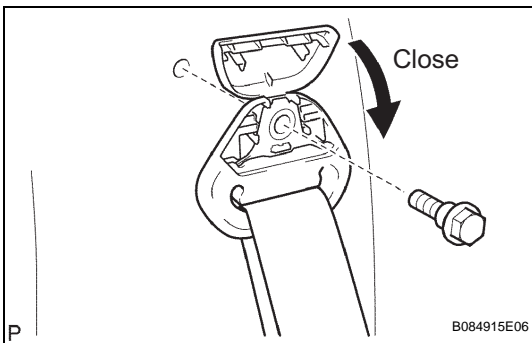



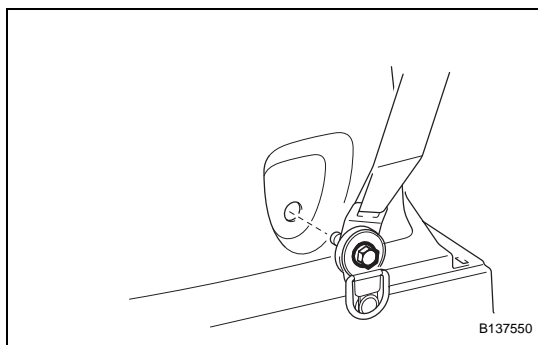


6. **INSTALL TETHER ANCHOR BRACKET SUB-ASSEMBLY (w/o Rear No. 2 Seat)**
  - (a) Install the tether anchor bracket with the bolt.
7. **INSTALL RECLINING REMOTE CONTROL LEVER BEZEL RH (w/o Rear No. 2 Seat) (See page [SE-105](#))**
8. **INSTALL REAR DECK TRIM COVER RH (w/ Rear No. 2 Seat)**
  - (a) Attach the 4 claws to install the trim cover.
  - (b) Install the belt.
9. **INSTALL REAR FLOOR FINISH PLATE (See page [IR-55](#))**
10. **INSTALL REAR FLOOR NO. 1 MAT SUPPORT SIDE PLATE (See page [IR-55](#))**
11. **INSTALL REAR FLOOR NO. 3 BOARD**
12. **INSTALL REAR FLOOR NO. 2 BOARD**
13. **INSTALL REAR NO. 2 SEAT ASSEMBLY LH (w/ Rear No. 2 Seat) (See page [SE-121](#))**
14. **INSTALL REAR NO. 2 SEAT ASSEMBLY RH (w/ Rear No. 2 Seat)**

HINT:  
Use the same procedures described for the LH side.
15. **INSTALL NO. 2 SEAT LEG COVER LH (w/ Rear No. 2 Seat) (See page [SE-123](#))**
16. **INSTALL NO. 2 SEAT LEG COVER RH (w/ Rear No. 2 Seat)**

HINT:  
Use the same procedures described for the LH side.
17. **INSTALL NO. 2 SEAT HINGE COVER LH (w/ Rear No. 2 Seat) (See page [SE-123](#))**
18. **INSTALL NO. 2 SEAT HINGE COVER RH (w/ Rear No. 2 Seat)**

HINT:  
Use the same procedures described for the LH side.
19. **INSTALL DECK BOARD ASSEMBLY (w/o Rear No. 2 Seat)**
20. **INSTALL REAR FLOOR NO. 1 BOARD (w/o Rear No. 2 Seat)**
21. **INSTALL REAR DOOR OPENING TRIM WEATHERSTRIP RH**

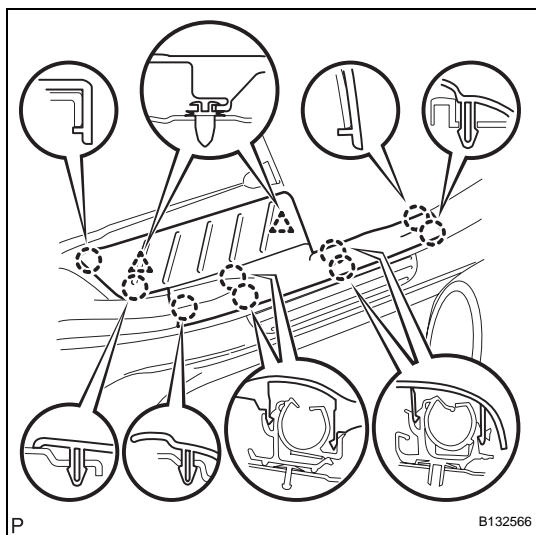**22. INSTALL REAR DOOR SCUFF PLATE RH**

- (a) Attach the 9 claws and 2 clips to install the scuff plate.